

Digital Surveillance Management



Congratulations on the purchase of your Ernitec Digital Video Management Sysemt (DVMS). This Quick Start Guide explains the installation involved with your DVR. For additional information or support, contact Technical Support or Customer Service at:

Telephone: +45 4450 3300 Customer Service: info@ernitec.com Technical Support: support@ernitec.com Web: www.ernitec.com

Choose a Proper Location

the system and many electronic devices.

• Uninterrupted Power Supply (UPS)

• A place away from direct sunlight

• An area with minimal dust or debris

Moisture-free environment

· Adequate ventilation to avoid excessive heat

Select a location for the DVR that meets the following

Relays and I/O

Power Cord

· Cash Register (Port Master) - Optional

requirements, as heat and other factors can shorten the life of

Note: Please make sure proper site preparation is complete before installing the DVR. This includes all cabling, wiring, connections, and data feeds. To ensure optimal performance for all cameras the signal should be 75 ohms 1 volt peak to peak. If there is any variance from this, there is no guarantee that the system will function correctly.

Unpacking the Contents

The following should be included with the DVR and in good condition. Please inspect these and the DVR while unpacking.

- Quick Start Guide
- Mouse
- Video input cables (except on S30)
- PTZ Control Cable
- Recovery DVD
- Client CD
- Nero CD
- Warranty Statement
- Surge protection and Anti-virus warning
- Power cord

Site Installation

Hardware Setup - Connect all input devices and external peripherals to the DVR. Please refer to the diagrams in regard to what should be connected to your type of DVR.


- Indoor & Outdoor Camera(s)
- VGA/DVI Monitor
- Spot Out Monitor (Optional on H-Class)
- PTZ Camera(s) Optional
- Mouse

Ethernet

Audio in

· Speakers - Optional

Note: For proper Indoor and Outdoor camera installation, an In-Line surge suppressor should be used to reduce exposure to surges and lightning strikes.

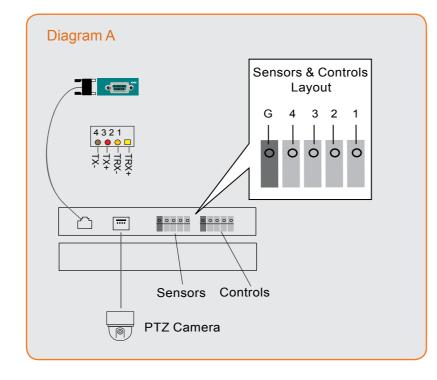




Plug-in: LPT Printer - Optional VGA (Blue) Connect Serial Port

.... - - I

2

on IO Board (see Diagram A) 4a no POS IO Board (see Diagram A)

Video 9-16. Video 1-8. & Spot Monitor

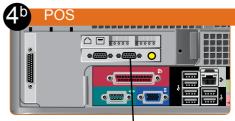

Port Not Used

o 🎬 o 📖 🤅

• • •



RJ 45 - For Network or broadband connection

USB Port for USB devices (Ex: Mouse & Keyboard)



IO Board (see Diagram A)

Video 9-16, Video 1-8, & Spot Monitor

Dual Serial Card

Port Not Used