

## ExPORT OF VIDEO

There are 3 ways to export video from ERIS 4000

- 1. From a certain time
- 2. From a certain Event
- 3. From a specific video sequence.

The first option is used when you know the time. It's passable to determine the length of the video sequence.

Second option is when the DVR is set for Motion detection. Here you will export the video sequence for the exact Event alarm.

The Length is detriment by the video sequence recording settings wish is 20 seconds default.

Third option you can search throw the recorded video, and determine the length by Easy Video export.

## With the ERIS there comes a 4GB USB Key. Use this for video export

Not all USB Keys works on a DVR. If you customer wants to have a extra USB Key we have a list here with tested USB keys. You can also order a extra 4 GB ernitec USB Key. Use the number here under.

> 1GB JETFLASH V30 TS1GJFV30. DT101C/4GB Kingston DataTraveler. TS4GJFV20 USB2.0 4GB V20 Ernitec 4GB USB Article number: 0063-07519



## Eksport af video



Press SEARCH

	5 ø g	1 6	f					-			-				-			
		2	17	+	8.1		+ 1			_	_							
			6 8	1	0 5	1	20	0 0	9		1	1	:	0	8	: 1	5 3	3
		2	28	1	0 5	1	20	) (	9		1	1	:	1	3		2 6	5
		2	18	1	0 5	1	20	) (	9		1	1	:	1	3	: :	2 1	i.
					S	t	a	- 1	5	а	f	s	p	î.	I.	n	i r	ng
						C	al	1 6	n	d	a	r		s	e	a	r c	: h
- Søg	g e	ft	e	r.	ł	1 20	n	d e	1	s	e		-	-	-	-	-	
anal	:		C	H	1		CI	12	2		C	H	3			CI	14	1
							Ha	e ľ	h d	e	I	s	e	s	1	i	s t	e
st recoi day ar vhat ca amera	rdin nd ti mei will	ig ime ra y be	; /0 V	isi rc	wi ible	ll ( e (	ex  on	pc tł	ort ne	E	ic Ev	le re	o nt	fr t li	TO is	m t.		Only
	, ат		a	-	=\/e	en	n c	، ہ دا	ŀ			U	U.	^	13		110	apici
2t				•	vent to see the F	vent to see the Eve	vent to see the Even	vent to see the Event li	vent to see the Event list	In the see the Event list	Yent to see the Event list	Iont to soo the Event list	Vant ta ana tha Event list	•	•	•	Kant ta aga tha Evant list	

Search menue obens with following options

FIRST		nændei	sesli	ste	
	PAGE				
	Dato	TI	d	Ka	Туре
28/1	05/200	9 14:28	:11	1	Tab
28/	05/200	9 11:24	: 33	1	Tab
28/1	05/200	9 11:13	: 3 3	1	Bevægel
28/1	05/200	9 10:18	: 46	1	Bevægel
28/1	05/200	9 10:18	:06	1	Bevægel
28/	05/200	9 10:17	:09	1	Bevægel
28/	05/200	9 10:15	:14	1	Bevægel
28/	05/200	9 10:15	:09	1	Bevægel
28/	05/200	9 10:14	: 45	1	Bevægel
28/	05/200	9 10:14	:08	1	Bevægel
28/1	05/200	9 10:05	: 48	1	Bevægel
28/1	05/200	9 10:05	:18	1	Bevægel
ra					
<b>a</b> .					
Vi M Al Move the ENTER	ideo Los otion= I larm= A Th e curser	ss= Miss Motion a larm in f e Back. <sup>.</sup> to the d	sing vic larm rom te lesired	leo sigr rminals event a	nal on and press

## Eksport af video udfra dato og tid

Press "SEARCH" Put the curser on "Vælg" Insert the date and time. Use the arrow keys to navigate "ENTER" to confirm

Move the curser to start the playback Press "ENTER"

Playback starts

Easy Export makes sure you only need 3 Push to export the content.



How it works: While you playback video Press "COPY" Mark A starts When you want to end the video clip press "COPY" again. Mark B is ??.

A menu opens, make sure you have a media in the ERIS. USB Key or a DVD disc. Press "ENTER" to confirm or "ESC" to go back.





If there are no export media availabel you will see this error message.

Please insert DVD media or USB key and confirm by press ENTER



Confirmation



Confirm with ENTER

ERIS will start the export of the video. Typical fil size is between 7 and 40 MB Export time is 2-3 minuttes.

The player will be exportet to the media together with the video.

Page 5

Scanner og vælger enhed





When Video Export is done you will see this picture. Press ENTER to close the winow and remove the USB Key.

On the USB Key there will be a Player sow the video can be seen

Press "SEARCH" Set the curser on "Calender Search" and Press "ENTER"

-			50	g		5	-	τ,	u a	Г -		L	-	a		1				~	~		-	į
Fra:						2	1	1	0	5	1	2	0	0	9		1	1	•	0	8	-	5	ľ
Slut:						2	8	1	0	5	1	2	0	0	9		1	1	:	1	3	-	2	l
Vaelg:						2	8	1	0	5	1	2	0	0	9		1	1	:	1	3	1	2	l
										S	t	а	r	t		а	f	s	P	i	1	n	i.	ġ
											C	a	1	e	n	d	a	r		S	e	a	r	ĺ
		Sø	g	e	f	t	e	r		h	88	n	d	e	1	s	e		_	_		_	2	
Vælg	kan	al	20				C	н	1			C	H	2			С	H	3			C	H	l
												H	æ	n	d	e	I	s	e	S	I	i	S	
																						2		

	-		-			_		-		-		
	M		Т	W	3	Т		F	_	S		
								1		2		
3	4		5	6		7		8		9		
10	11	1	2	13	1	4	1	5	1	6		
17	18	1	9	20	2	1	2	2	2	3		
24	25	2	6	27	2	8	2	9	3	0		
31												
_	- []	Sø	g	eft	e	r.	t	i	d			
	-											
											5	

Move the curser around with arrow buttons. Confirm with "ENTER" Text market with green is where you are. Date market with black contains recording. Gray is empty.

Move the curser to a day market with black.

The time line will show the kind of recording in different colour.

RED is alarm

Yellow is normal recording.

Press "ENTER"

Move the arrow with arrow Left/right. Sellect a recording by pressing "ENTER" View the selected recording by moving the cursere to play. and press "ENTER"



Insert the USB Key in your computers USB plug. Wait until Windows has found the unit. Open Windows explore and choose the USB drive.



Select USB Key, and Dobbel cllic on the map Player.



Contract and a state of the sta			100
ernitec	2 0 43	Page 10	

The Player opens, Next step is to select a video



PLAY

next to the ermitec logo

Video is saved in a folfer with Year/month/ date

If there are more video sequence on the same Year/month/day ERIS creates a sub folder named with Hours/minutes/seconds.

Video is saved as Normal and EVENT Choose the correct folder and click OK



Playback Window opens. You can disaple the camera you dont want to se. Clic on OK and palyback startes.





With the buttons you can search forward an bacward in the recording

With SNAPSHOT you can take a snapshoot

Snapshot is single JPG pictures format.

The picture is saved on your Desktop as snapshot-1.jpg, snapshot-2.jpg...