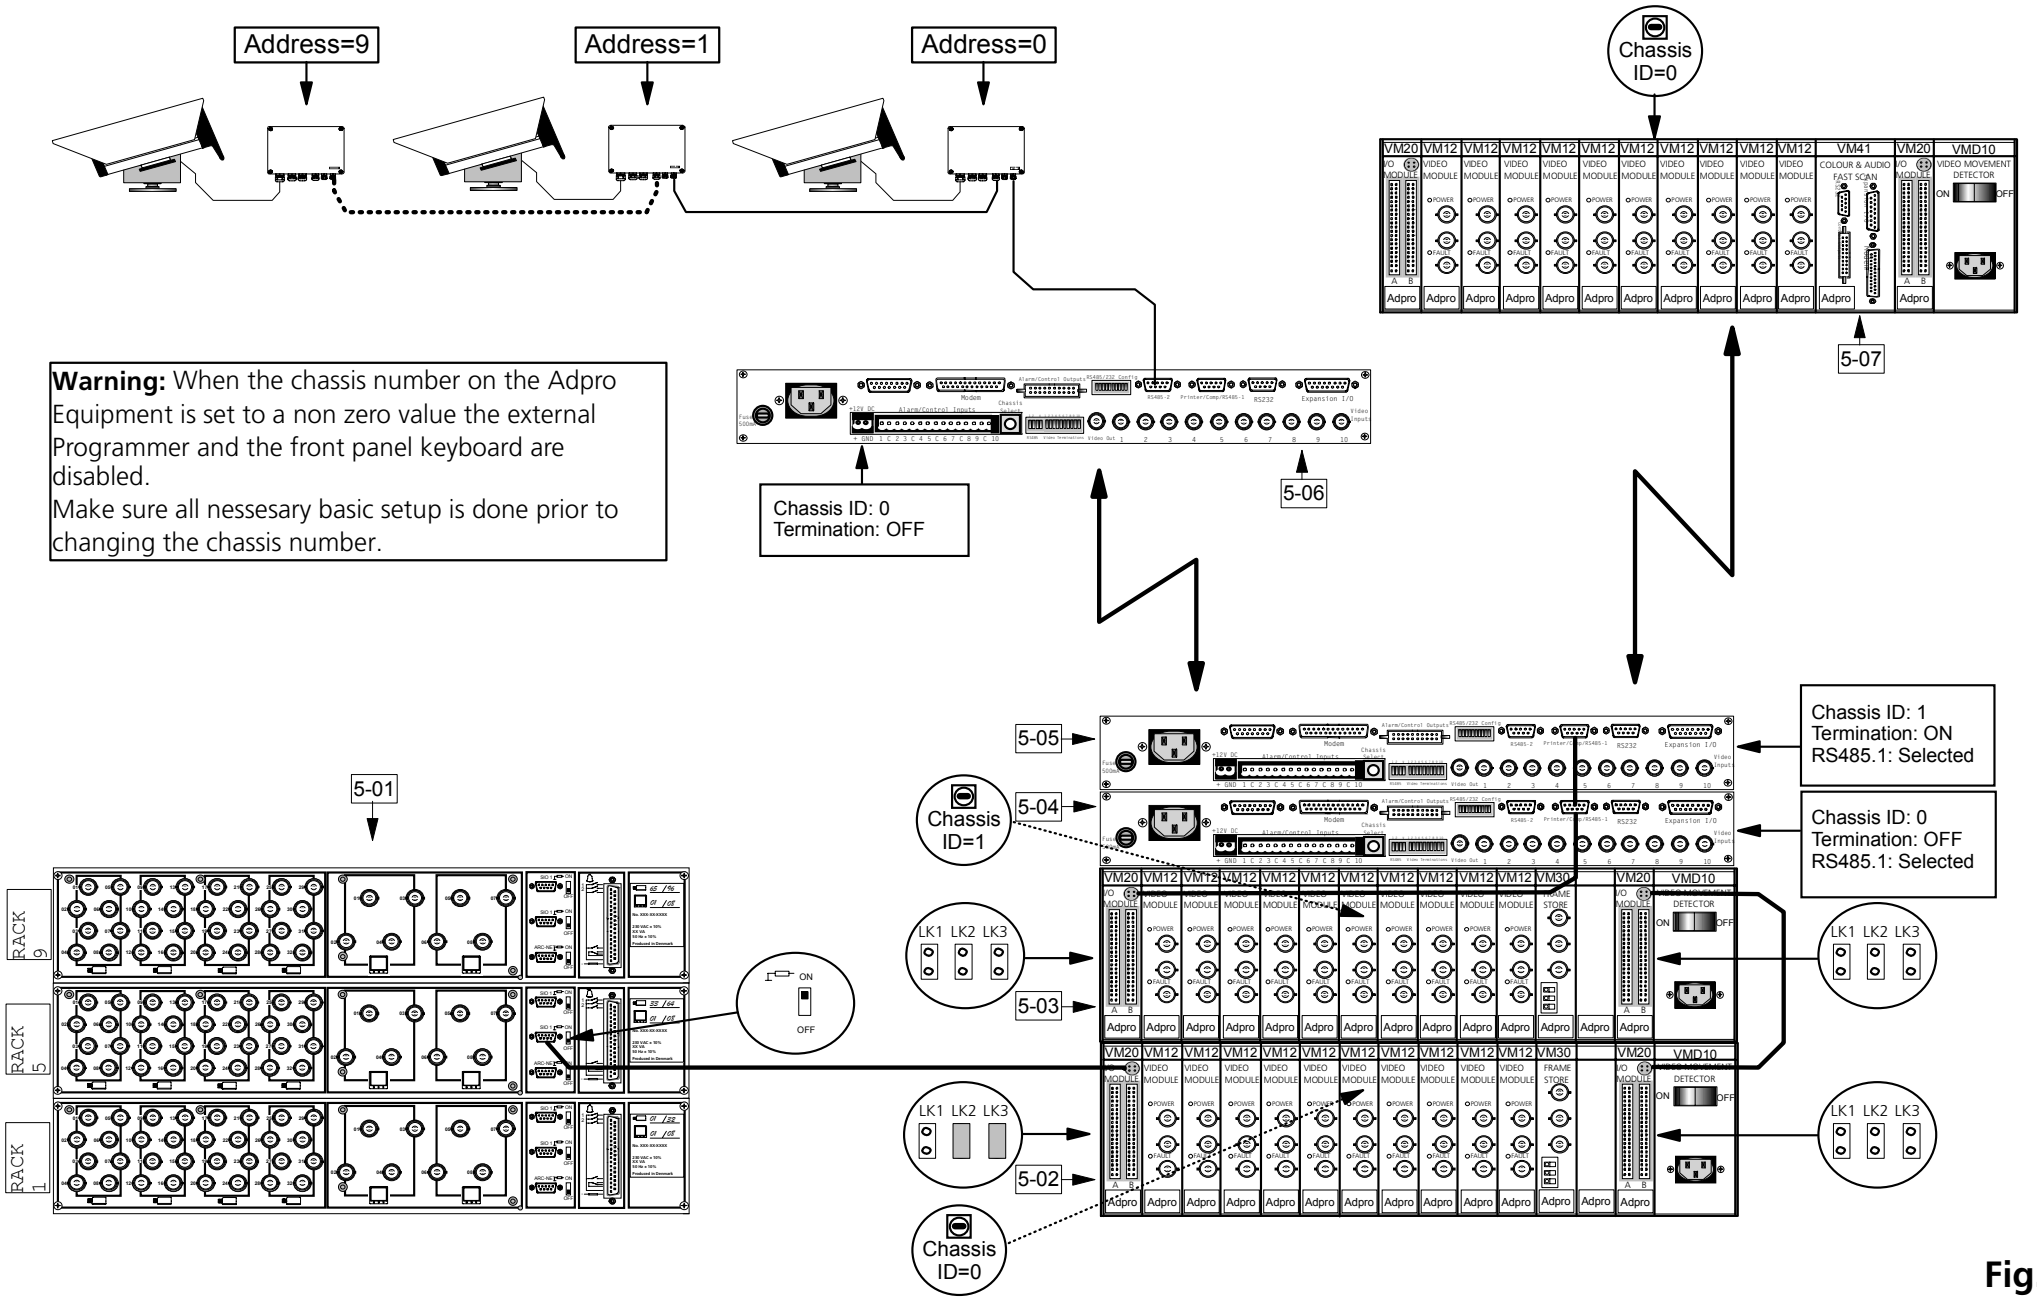
Address=9
Address=1
Address=0
Chassis ID=0
5-07
Warning: When the chassis number on the Adpro Equipment is set to a non zero value the external Programmer and the front panel keyboard are disabled.
Make sure all nessesary basic setup is done prior to changing the chassis number.
Chassis ID: 0
Termination: OFF
5-06
5-01
RACK 9
RACK 5
RACK 1
ON
OFF
5-05
5-04
Chassis ID=1
Chassis ID: 1
Termination: ON
RS485.1: Selected
Chassis ID: 0
Termination: OFF
RS485.1: Selected
LK1 LK2 LK3
5-03
5-02
Chassis ID=0

Fig. 5