

User's Manual

Mercury SX 4 Series



Caution and Preventive Tips

Important Information

Before proceeding, please read and observe all instructions and warnings in this manual. Retain this manual with the original bill of sale for future reference and, if necessary, warranty service. When unpacking your unit, check for missing or damaged items. If any item is missing, or if damage is evident, **DO NOT INSTALL OR OPERATE THIS PRODUCT**. Contact your dealer for assistance.

- Handle with care, do not drop the unit
- Mount the unit in an equipment rack or place it on a solid, stable surface
- Indoor use only. Do not place the unit in a humid, dusty, oily, or smoky site
- Do not place it in an area with poor ventilation or in an area close to fire or other sources of heat. Doing so may damage the unit as well as cause fire or an electric shock
- When cleaning is necessary, shut down the system and unplug the unit from the outlet before uncovering the top cover. Do not use liquid cleaners or aerosol cleaners. Use only a damp cloth for cleaning
- Always shut down the system prior connecting or disconnecting accessories, with the exception of USB devices

Copyright

Under copyright laws, the contents of this user manual may not be copied, photocopied, translated, reproduced or reduced to any electronic medium or machine-readable format, in whole or in part, without prior written permission of the company.

Important Information

Before proceeding, please read and observe all instructions and warnings in this manual. Retain this manual with the original bill of sale for future reference and, if necessary, warranty service. When unpacking your unit, check for missing or damaged items. If any item is missing, or if damage is evident, **DO NOT INSTALL OR OPERATE THIS PRODUCT**. Contact your dealer for assistance.

Regulation






	<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
	<p>This symbol on the product or on its packaging indicates that this product shall not be treated as household waste in accordance with Directive 2002/96/EC. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By proper waste handling of this product you ensure that it has no negative consequences for the environment and human health, which could otherwise be caused if this product is thrown into the garbage bin. The recycling of materials will help to conserve natural resources.</p> <p>For more details information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.</p>
	<p>This symbol intends to alert the user to the presence of unprotected “Dangerous Voltage” within the product’s enclosure that may be strong enough to cause a risk of electric shock.</p>
	<p><i>This symbol intends to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</i></p>
	<p>Compliance is evidenced by written declaration from our suppliers, assuring that any potential trace contamination levels of restricted substances are below the maximum level set by EU Directive 2002/95/EC, or are exempted due to their application.</p>

Table of Contents

<u>1.</u>	<u>Overview</u>	4
1.1	<u>Features</u>	4
1.2	<u>Package Contents</u>	5
1.3	<u>Dimensions</u>	6
1.4	<u>Connectors</u>	7
<u>2.</u>	<u>Camera Cabling</u>	8
2.1	<u>Connect Power</u>	8
2.2	<u>Connect Ethernet Cable</u>	8
2.3	<u>Connect Alarm I/O</u>	8
<u>3.</u>	<u>System Requirements</u>	8
<u>4.</u>	<u>Access Camera</u>	10
<u>5.</u>	<u>Setup Video Resolution</u>	15
<u>6.</u>	<u>Configuration Files Export / Import</u>	16
<u>7.</u>	<u>Tech Support Information</u>	17
7.1	<u>Delete the Existing Viewer</u>	17
7.2	<u>Setup Internet Security</u>	18

Appendix: Technical Specifications

1. Overview

The Full HD Multi-Streams Mini Rugged Dome IP Camera is an easy setup camera with PoE supported to reduce complicated cabling without sacrificing performance. Quad Streams Compression (H.264 Baseline / Main / High Profile + MJPEG) are supported for efficient bandwidth and storage management. Up to 4M resolution is offered for providing high definition images. For dark environments, the camera has incorporated WDR, 3DNR and Day / Night ICR technologies to capture clear images in lowlight conditions.

The compact outlook design of the camera is ideal for hard surface mount installation, and the conduit enables waterproof cabling in outdoor environments. Meanwhile, the modularized design of the camera makes the installation even easier by directly snapping on the camera module after housing installation.






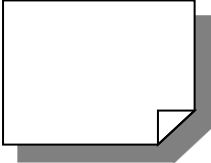

1.1 Features

- 1/3" Progressive Scan CMOS Sensor
- Dual Streaming- Full HD 1080P Real Time + D1 Real Time
- Quad Streams Compression- H.264 Baseline / Main / High Profile + MJPEG
- Multi-language Support
- Smart Event Function-
Motion Detection / Network Failure Detection / Tampering Alarm / Periodical Event / Manual Trigger / Audio Detection
- Remote Zoom & Focus (Motorized Lens and AF Lens)*
- True Wide Dynamic Range (120dB)
- Privacy Masks
- 3D Noise Reduction / 2D Noise Reduction
- Vertical View Mode (Image rotation by 90 degrees)
- Smart IR Mode
- True Day / Night (ICR)
- IR LED Module (working distance up to 45 m)
- SD Card Support
- BNC Analog Output
- RS-485 Support
- Weatherproof (IP66 International)
- ONVIF Profile S Support

(*) Optional


1.2 Package Contents

Please check the package containing the following items listed below.

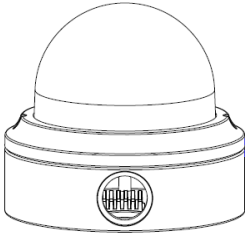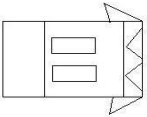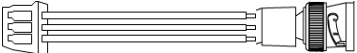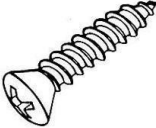 <p>Full HD Multi-Streams Mini Rugged Dome IP Camera</p>	
 <p>2-Pin Power Terminal Block</p>	 <p>BNC Analog Cable Included</p>
 <p>Self Tapping Screws (x2)</p>	 <p>Plastic Screw Anchors (x2)</p>
 <p>Quick Guide</p>	 <p>USB Stick (bundled software and documentation)</p>


1.3 Dimensions

The dimensions of the camera are shown below.

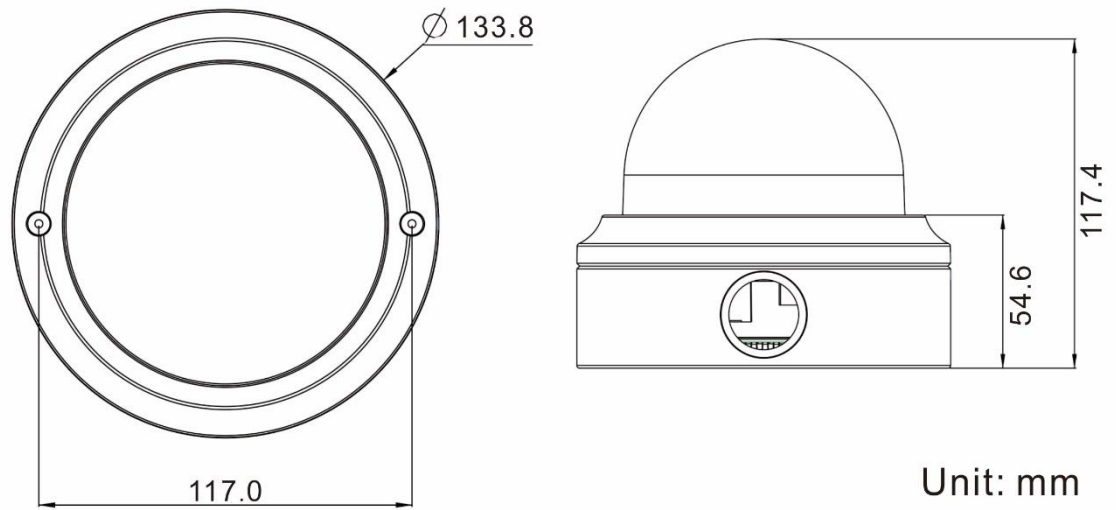

1.4 Connectors

The diagram below shows the default button and various connectors of the camera. Definition for each connector is given as follows.

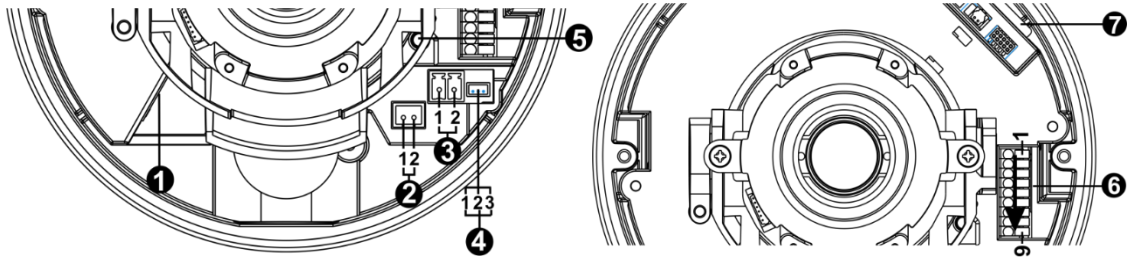

No.	Connector	Pin	Definition	Remarks	
1	RJ-45	-	For network and PoE connections		
2	BNC*	1	BNC		For analog video output
		2	GND		
3	Power (DC 12V / AC 24V)	1	DC 12V	AC 24V 1	Power connection
		2	GND	AC 24V 2	
4	RS-485	1	D+		RS-485 connection
		2	D-		
		3	GND		
5	Default Button	-	Press the reboot button with a proper tool for at least 20 seconds to reboot the camera.		
6	Alarm & Audio I/O	1	Audio In L		Audio In
		2	Audio In R		
		3	GND		
		4	Audio Out L		Audio Out
		5	Audio Out R		
		6	Alarm Out +		Alarm connection
		7	Alarm Out -		
8	Alarm In +				
7	SD Card Slot	-	Insert the SD card into the card slot to store videos and snapshots. Do not remove the SD card when the camera is powered on.		

*Please contact the manufacturer for the compatible BNC cable.



NOTE: It is not recommended to record with the SD card for 24/7 continuously, as it may not be able to support long term continuous data read/write. Please contact the manufacturer of the SD card for information regarding the reliability and life expectancy.

2. Camera Cabling

Before users connect cables, make sure that all cables and the power adaptor are placed in dry and well-waterproofed environments, e.g. waterproof boxes. The purpose is to prevent moisture accumulation inside the camera and moisture penetration into cables, which might lead to device breakdown. Please refer to the following sections for camera connection.

2.1 Connect Power

For power connection, please refer to section [Connectors](#). Alternatively, users can power the camera by PoE if a Power Sourcing Equipment (PSE) switch is available. Please refer to the section below for Ethernet cable connection.



NOTE: If PoE is used, make sure PSE is in use in the network.


2.2 Connect Ethernet Cable

To have best transmission quality, cable length shall not exceed 100 meters. Connect one end of the Ethernet Cable to the RJ-45 connector of the camera, and plug the other end of the cable to the network switch or PC.



NOTE: In some cases, Ethernet crossover cable might be needed when connecting the IP camera directly to PC.

Check the status of the link indicator and activity indicator LEDs. If the LEDs are unlit, please check the LAN connection.

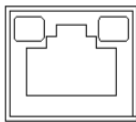

Green Link Light indicates good network connection.
Orange Activity Light flashes for network activity indication.

2.3 Connect Alarm I/O

The camera supports one alarm input and one relay output for alarm application. Refer to section [Connectors](#) for pin definitions.

3. System Requirements

To perform the IP camera via web browser, please ensure the PC is in good network connection, and meet system requirements as described below.

Items	System Requirement
Personal Computer	1. Intel® Pentium® M, 2.16 GHz or Intel® Core™2 Duo, 2.0 GHz 2. 2 GB RAM or more
Operating System	Windows VISTA / Windows XP / Windows 7

Web Browser	Microsoft Internet Explorer 6.0 or later Firefox Chrome Safari
Network Card	10Base-T (10 Mbps) or 100Base-TX (100 Mbps) operation
Viewer	ActiveX control plug-in for Microsoft IE

4. Access Camera

For initial access to the IP camera, users can search the camera through the installer program: DeviceSearch.exe, which can be found in “DeviceSearch” folder in the supplied CD.

Accessing the Camera by Device Search Software

Step 1: Double click on the program Device Search.exe.

1.

Step 2: After its window appears, click on the <Device Search> button on the top. All the finding IP devices will be listed in the page.

Step 3: Find the camera in the list by its IP address and click on it. The default IP address of the camera is: **192.168.0.250**.

2.

Step 4: The default IP address of the camera may not be in the same LAN as the IP address of the PC. If so, the IP address of the camera needs to be changed. Right click on the camera and click <Network Setup>. Meanwhile, record the MAC address of the camera for future identification.

3.

Step 5: The <Network Setup> page will come out. Select <DHCP> and click <Apply> down the page. The camera will be assigned with a new IP address.

Step 6: Click <OK> on the Note of setting change. Wait for one minute to re-search the camera.

Step 7: Click on the <Device Search> button to re-search all the devices. Find the camera in the list by its MAC address. Then double click or right click and select <Browse> to access the camera directly via a web browser.

Step 8: A prompt window requesting for default username and password will appear. Enter the default username and password shown below to login to the camera.

Login ID	Password
Admin	1234



NOTE: ID and password are case sensitive.



NOTE: It is strongly advised that administrator's password be altered for the security concerns. Refer to the [Full HD Multi-Streams IP Camera Menu Tree](#) in the supplied CD for further details.

Installing Viewer Software Online

For the initial access to the IP camera, a client program, Viewer, will be automatically installed to the PC when connecting to the camera.

If the web browser doesn't allow Viewer installation, please check the Internet security settings or ActiveX controls and plug-ins settings (refer to section [Setup Internet Security](#)) to continue the process.

The Information Bar (just below the URL bar) may come out and ask for permission to install the ActiveX Control for displaying video in browser. Right click on the Information Bar and select <Install ActiveX Control...> to allow the installation.

The download procedure of Viewer software is specified as follows.

Step 1: In the Viewer installation window, click on <Next> to start installation.


4.

Step 2: The status bar will show the installation progress. After the installation is completed, click on <Finish> to exit the installation process.


5.

Step 3: Click on <Finish> to close the Viewer installation page.


Once the Viewer is successfully installed, the Home page of the IP camera will be shown as the figure below.

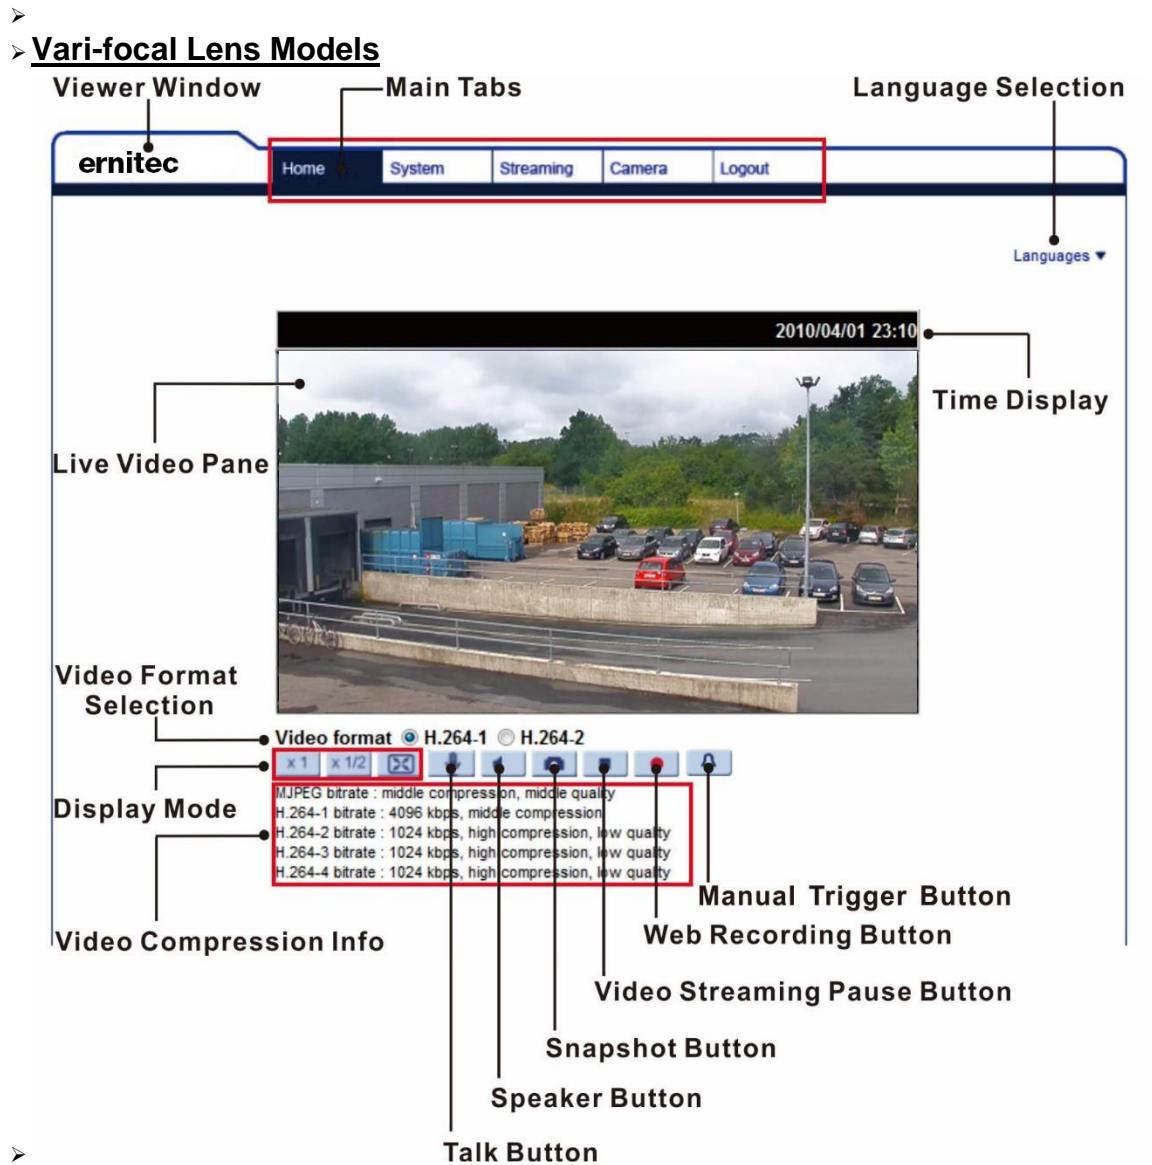

Motorized Lens Models

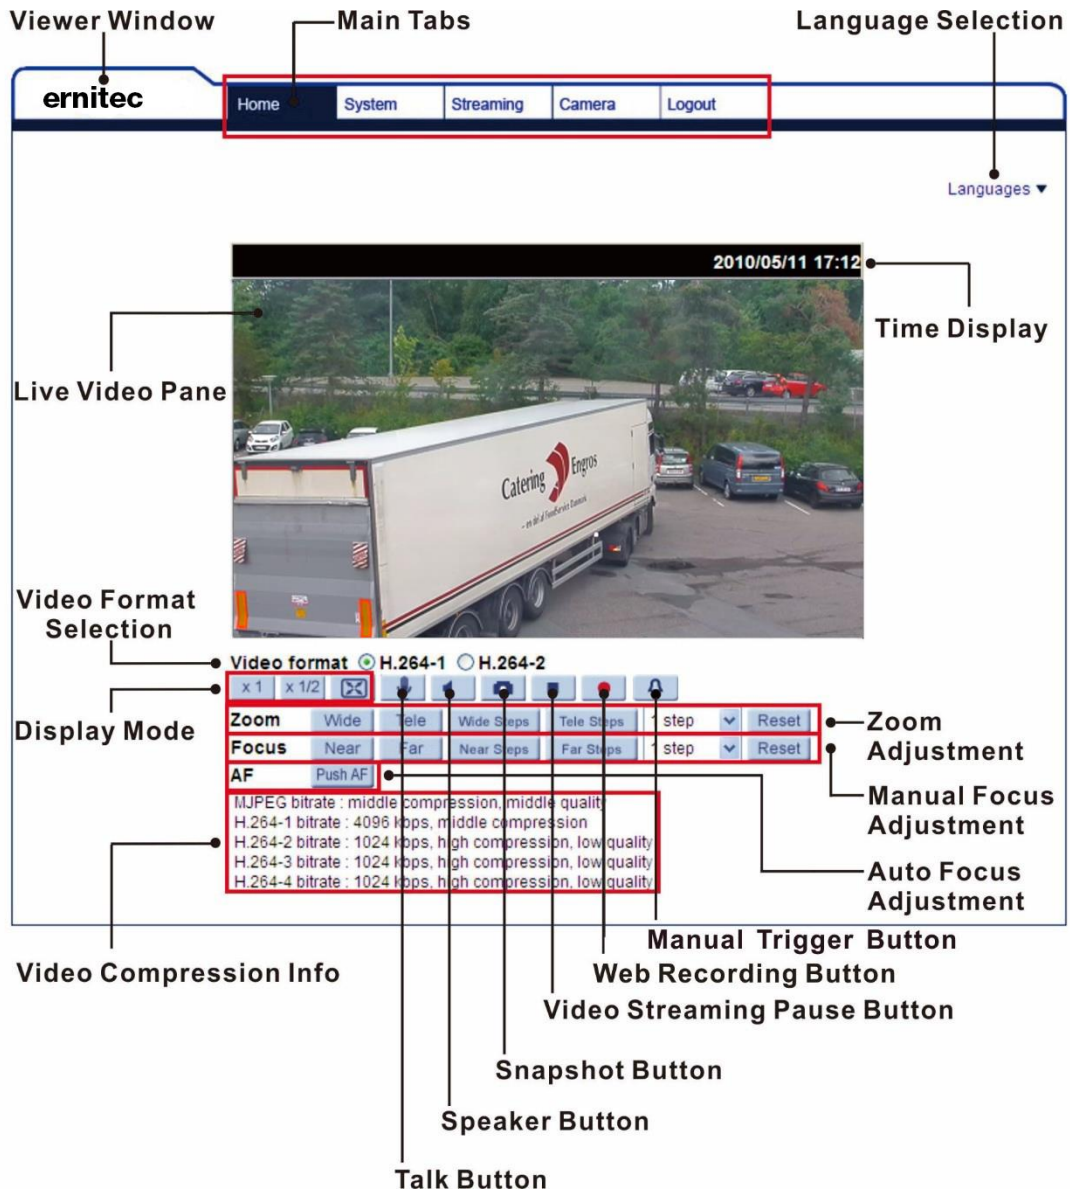

AF Lens Models

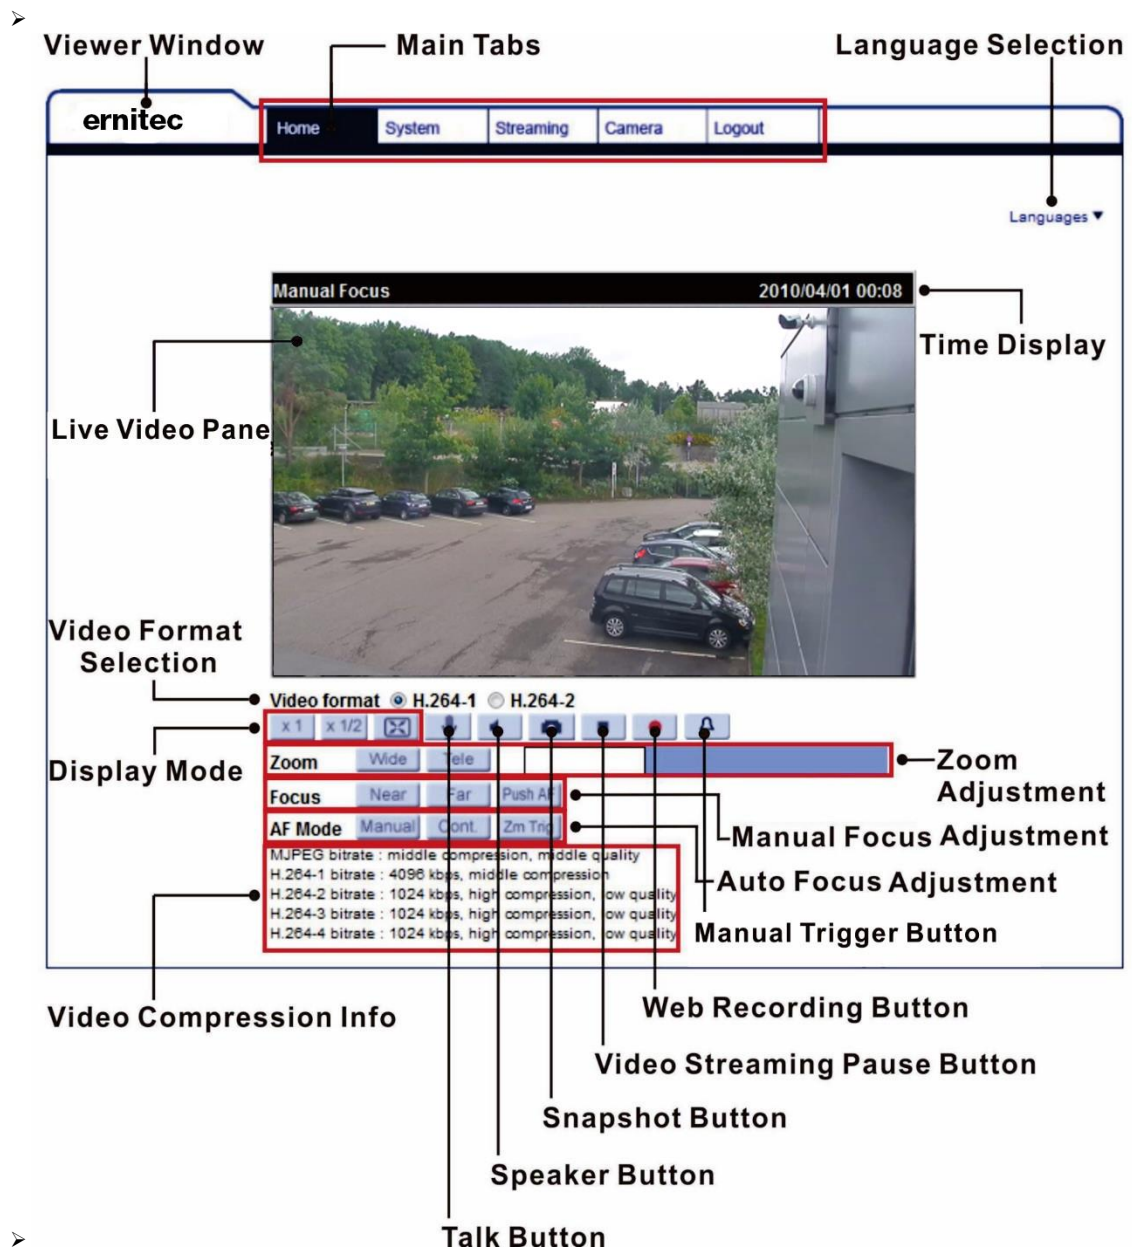

➤ **Zoom and Focus Adjustment (Motorized Lens / AF Lens Models Only)**

The live image will be displayed on the Home page when the camera is successfully accessed. If zoom or focus is not at the desired position, please use the function buttons on the Home page for adjustment. Refer to the [Full HD Multi-Streams IP Camera Menu Tree](#) in the supplied CD for more details about the function buttons.



NOTE: For **vari-focal lens** models, please refer to the [Full HD Multi-Streams Mini Rugged Dome IP Camera Installation Guide](#) in the supplied CD to adjust zoom and focus.

5. Setup Video Resolution

Users can setup video resolution on Video Format page of the user-friendly browser-based configuration interface.

Video Format can be found under this path: **Streaming**> **Video Format**.

The screenshot shows the ernitec web interface. The top navigation bar includes 'Home', 'System', 'Streaming' (highlighted in red), 'Camera', 'Pan Tilt', 'Logout', and 'Mercury SX 334IR'. The left sidebar contains a list of configuration options: 'Video Format' (highlighted in red), 'Video Compression', 'Video Text Overlay', 'Video ROI', 'Video OCX Protocol', 'Video Frame Rate', 'Video Mask', and 'Audio'. The main content area is titled 'Video Format' and contains the following settings:

- Video Resolution :**
 - Format: H.264 + H.264 (dropdown)
 - Format 1 : 2688 x 1512 (25 fps) (dropdown) H-264-1 (dropdown)
 - Format 2 : 720 x 576 (25 fps) (dropdown) H-264-2 (dropdown)
 - BNC support : Yes
 - Save button
- Note :** Image attachment by FTP or E-mail will be available only while MJPEG streaming is selected.
- Video Rotate Type :**
 - Normal video (dropdown)
 - Save button
- GOV Settings :**
 - H.264-1 GOV Length : 50 (input) H.264-2 GOV Length : 50 (input)
 - H.264-3 GOV Length : 25 (input) H.264-4 GOV Length : 25 (input)
 - Save button
- H.264 Profile :**
 - H.264-1 : Main profile (dropdown) H.264-2 : Main profile (dropdown)
 - H.264-3 : Main profile (dropdown) H.264-4 : Main profile (dropdown)
 - Save button

The default value of video resolution is as below in dual stream.

4M	H.264- 2688 x 1512 (25 fps) + H.264- 720 x 576 (25 fps)
-----------	---

For more details about the combinations of video resolution, please refer to the Full HD Multi-Streams IP Camera Menu Tree in the supplied CD.

6. Configuration Files Export / Import

To export / import configuration files, users can access the Maintenance page on the user-friendly browser-based configuration interface.

The Maintenance setting can be found under this path: **System> Maintenance**.

Users can export configuration files to a specified location and retrieve data by uploading an existing configuration file to the camera. This is especially convenient to make multiple cameras having the same configuration.

>

> **Export**

Users can save the system settings by exporting the configuration file (.bin) to a specified location for future use. Click on the <Export> button, and the popup File Download window will come out. Click on <Save> and specify a desired location for saving the configuration file.

> **Upload**

To upload a configuration file to the camera, click on <Browse> to select the configuration file, and then click on the <Upload> button for uploading.

7. Tech Support Information

This chapter will introduce how to delete previously-installed Viewer in the PC and how to setup the Internet security.

7.1 Delete the Existing Viewer

For users who have installed the Viewer in the PC previously, please remove the existing Viewer from the PC before accessing to the IP camera.

Deleting the Viewer

In the Windows <Start Menu>, activate <Control Panel>, and then double click on <Add or Remove Programs>. In the <Currently installed programs> list, select <Viewer> and click on the button <Remove> to uninstall the existing Viewer.

Deleting Temporary Internet Files

To improve browser performance, it is suggested to clean up all the files in the Temporary Internet Files. The procedure is as follows.

Step 1: Click on the <Tools> tab on the menu bar and select <Internet Options>.

6.

Step 2: Click on the <Delete> button under the <Browsing History> section.

Step 3: In the appeared window, tick the box beside the <Temporary Internet Files> and click on <Delete> to start deleting the files.

7.2 Setup Internet Security

If ActiveX control installation is blocked, please either set Internet security level to default or change ActiveX controls and plug-ins settings.

Internet Security Level: Default

Step 1: Start the Internet Explorer (IE).

Step 2: Click on the <Tools> tab on the menu bar and select <Internet Options>.

Step 3: Click on the <Security> tab, and select <Internet> zone.

Step 4: Down the page, click on the <Default Level> button and click on <OK> to confirm the setting. Close the browser window, and restart a new one later to access the IP camera.

ActiveX Controls and Plug-ins Settings

Step 1: Repeat **Step 1 to Step 3** of the previous section above.

Step 2: Down the page, click on the <Custom Level> button to change ActiveX controls and plug-ins settings. The Security Settings window will pop up.

Step 3: Under <ActiveX controls and plug-ins>, set **ALL** items (as listed below) to <Enable> or <Prompt>. Please note that the items vary by IE version.

ActiveX controls and plug-ins settings:

7. Binary and script behaviors.
8. Download signed ActiveX controls.
9. Download unsigned ActiveX controls.
10. Allow previously unused ActiveX controls to run without prompt.
11. Allow Scriptlets.
12. Automatic prompting for ActiveX controls.
13. Initialize and script ActiveX controls not marked as safe for scripting.
14. Run ActiveX controls and plug-ins.
15. Only allow approved domains to use ActiveX without prompt.
16. Script ActiveX controls marked safe for scripting*.
17. Display video and animation on a webpage that does not use external media player.

Step 4: Click on <OK> to accept the settings. A prompt window will appear for confirming the setting changes, click <Yes(Y)> to close the Security Setting window.

Step 5: Click on <OK> to close the Internet Options screen.

Step 6: Close the browser window, and restart a new one later to access the IP camera.