


Desiccant User Guide

To prevent moisture from condensing on IP Camera's Glass Cover, we strongly suggest you to place the desiccant in the IP Camera before installing and replace a new one every time when opening the Front Cover.


Step 1:

Unscrew the screw on Camera Housing and remove the Front Cover.

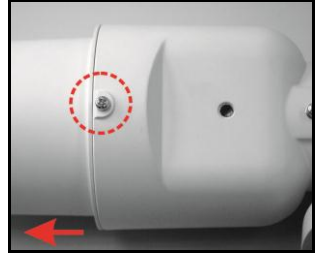


Step 2:

Carefully tear open the aluminum desiccant bag along the slit on one edge and take the desiccant out. Remove the paper backing of the double sided tape on one side of the desiccant and firmly place the desiccant on the spot as the figures on the right side.

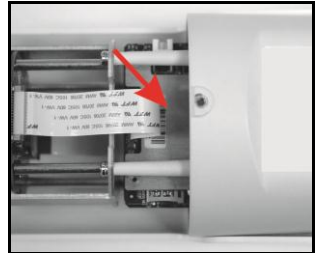

Standard

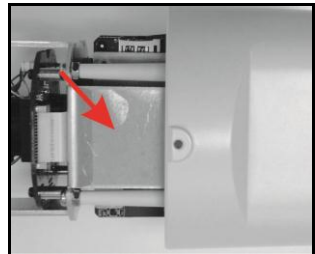

With Heater

Step 3:

Install the Front Cover back in position and tighten the screw.